

**Assembly
instructions for
shelves & sideboards**
by
Pickawood

| ENG |

P01-1122




Preparation – assembly	3
Preparation - small parts	4
Basic Assembly - construction outline	7
Preparing components for assembly	8
Assembly - connecting the elements	9
Assembly - basic structure - construction outline	11
Assembly – adjusting and fixing	12
Assembly – doors, flaps and handles	13
Assembly – adjusting and fixing - opening mechanisms	16
Assembly – drawers	18
Assembly – wall shelves	20
Assembly – wall cubes	20
Assembly – wall shelving boards	21
Assembly – notes	22


Preparation - assembly




Carefully unpack all the boxes, then arrange the **individual components** by shape and size.

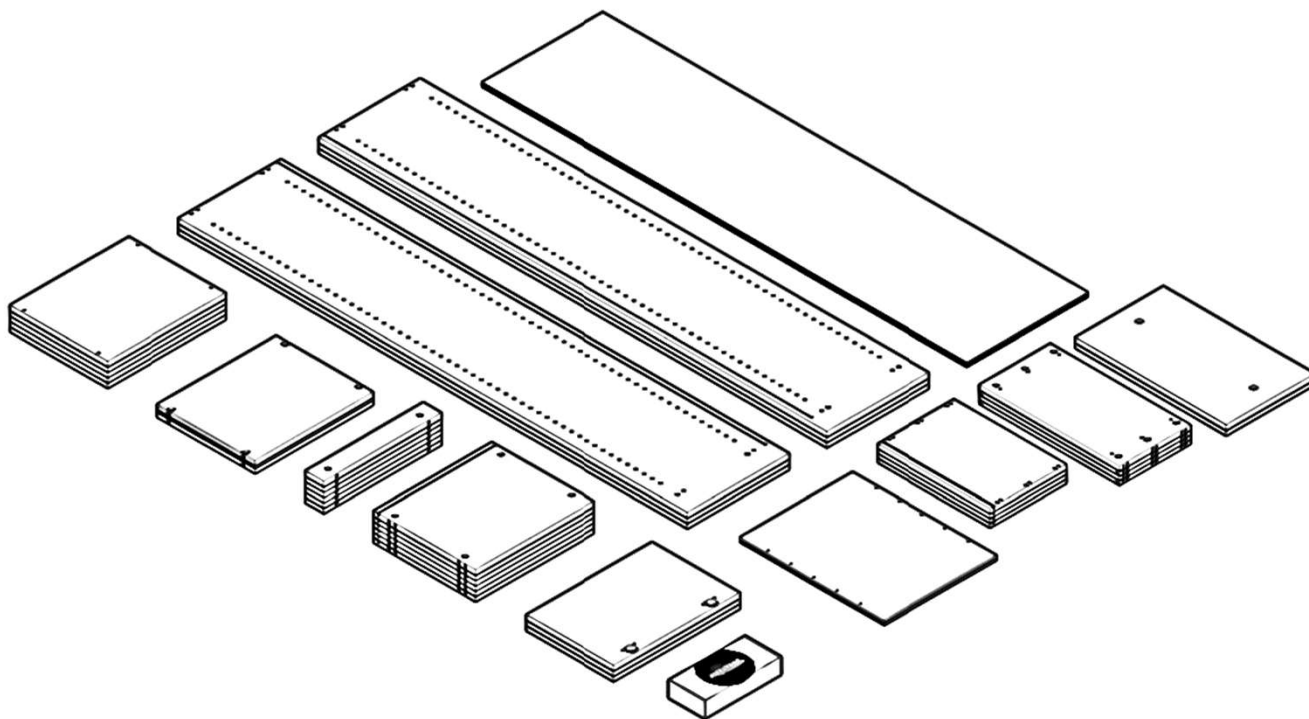


Tools – it is advisable to obtain the necessary tools in advance. We recommend a hammer with a rubber head, a spirit level and a screwdriver. If available, a cordless screwdriver with appropriate attachments (bits) would be beneficial.

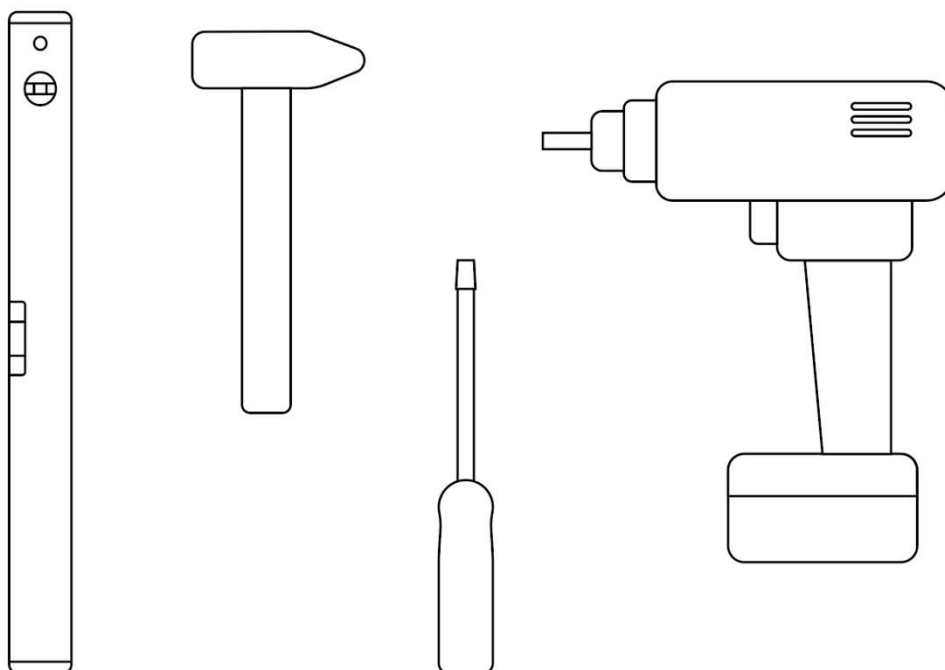

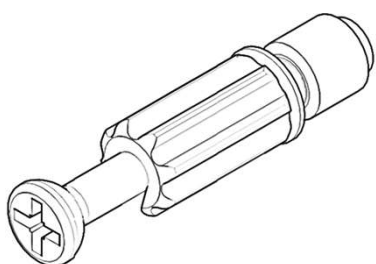


V01

Structure connector dowel
(eccentric)

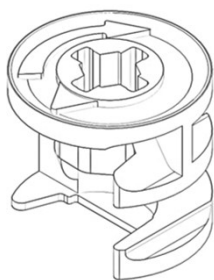


V02

Structure connector
housing (eccentric)

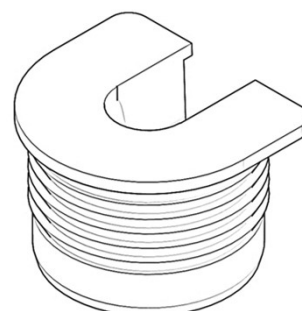


V03

Shelf connector housing

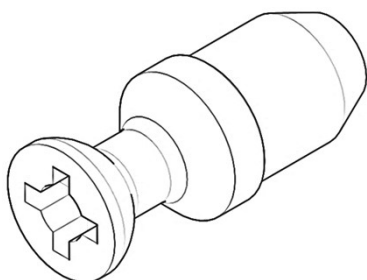


V04

Shelf connector dowel

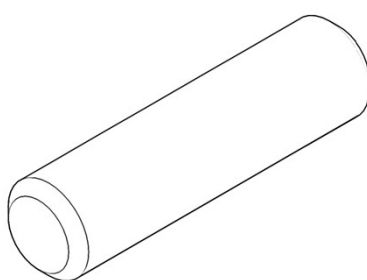


V05

Wood dowel

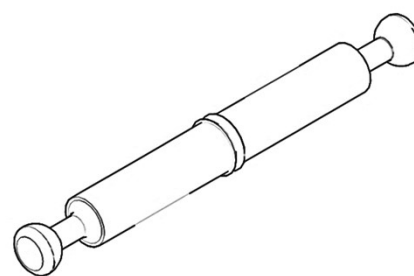


V06

Surface connector dowel
(double eccentric)

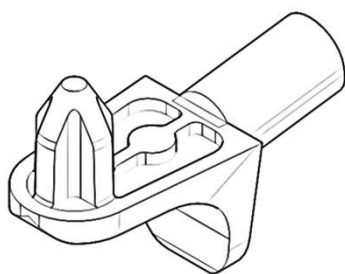


V07

Shelf support for strip with
mounting holes

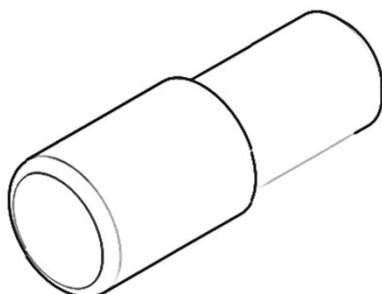


V08

Glass shelf support / door
stop

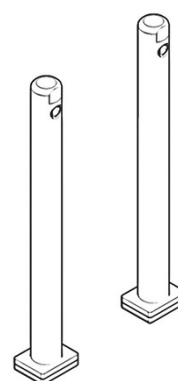


V09

Height adjuster

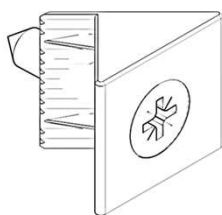


V10

Back panel corner mount

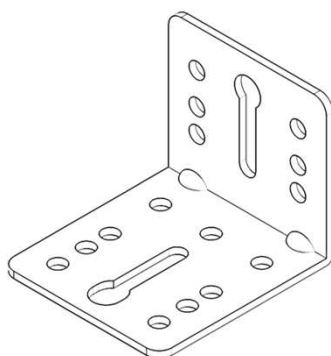


V11

Mounting bracket (anti-tilt)

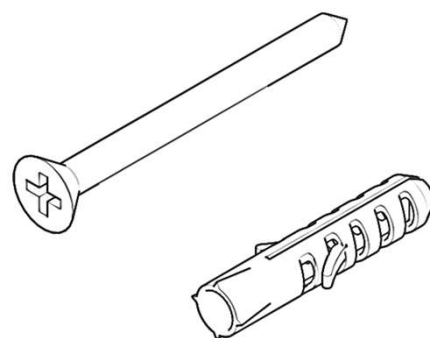


V12

Screws & dowels

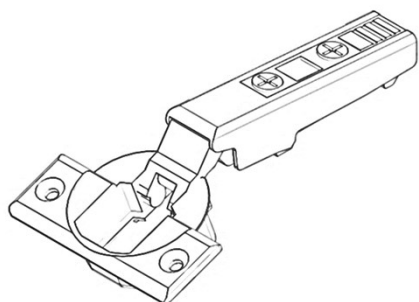


V13

Hinges

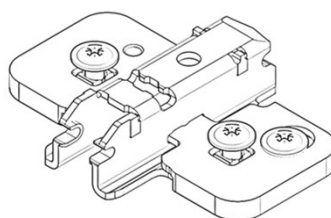


V14

Base / support for hinge

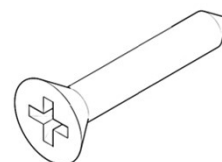


V15

Wood screw
Ø4x16 mm

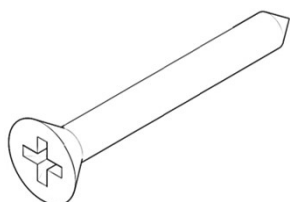


V16

Wood screw
Ø4x25 mm

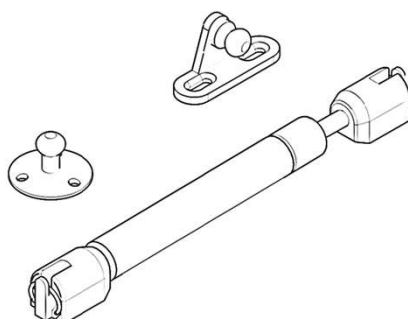

V17


Flap connectors - set

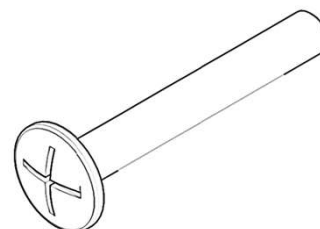

V18


M4 threaded screw

Preparation - small parts

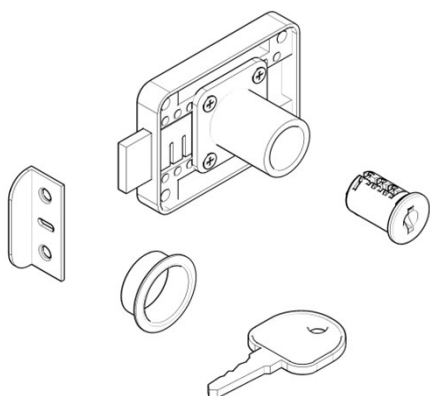


V19

Furniture lock

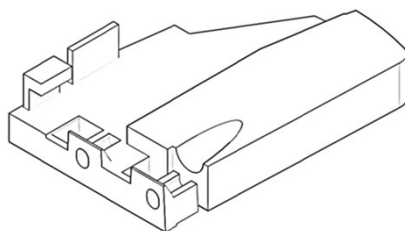


V20

Fixing clip for drawer guides

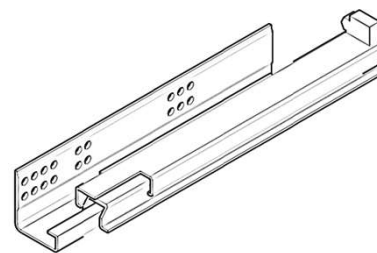


V21

Drawer rail

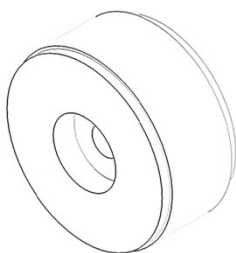


V22

Adjustment lock for front panel

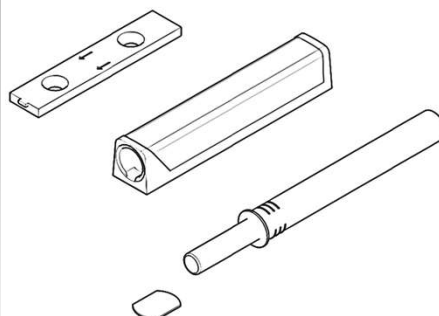


V23

Push-To-Open - Set (door / flap)

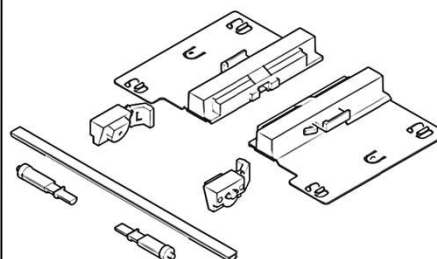


V24

Push-To-Open - Set (drawer)

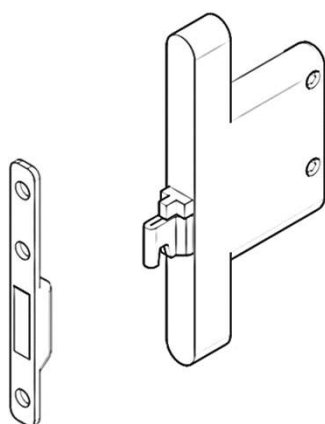


V25

Wall mount for hanging shelf

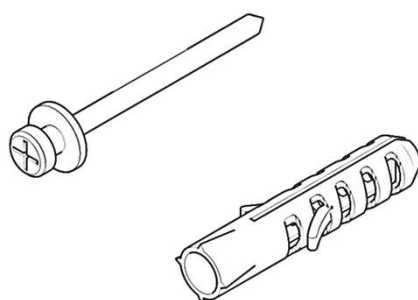


V26

Screw & dowel wall mounting for wall cube

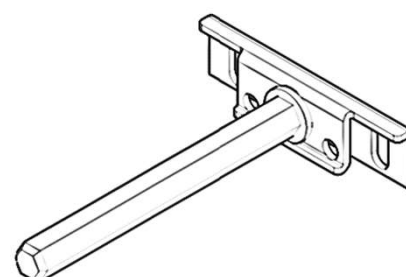


V27

Wall mount for wall shelving boards

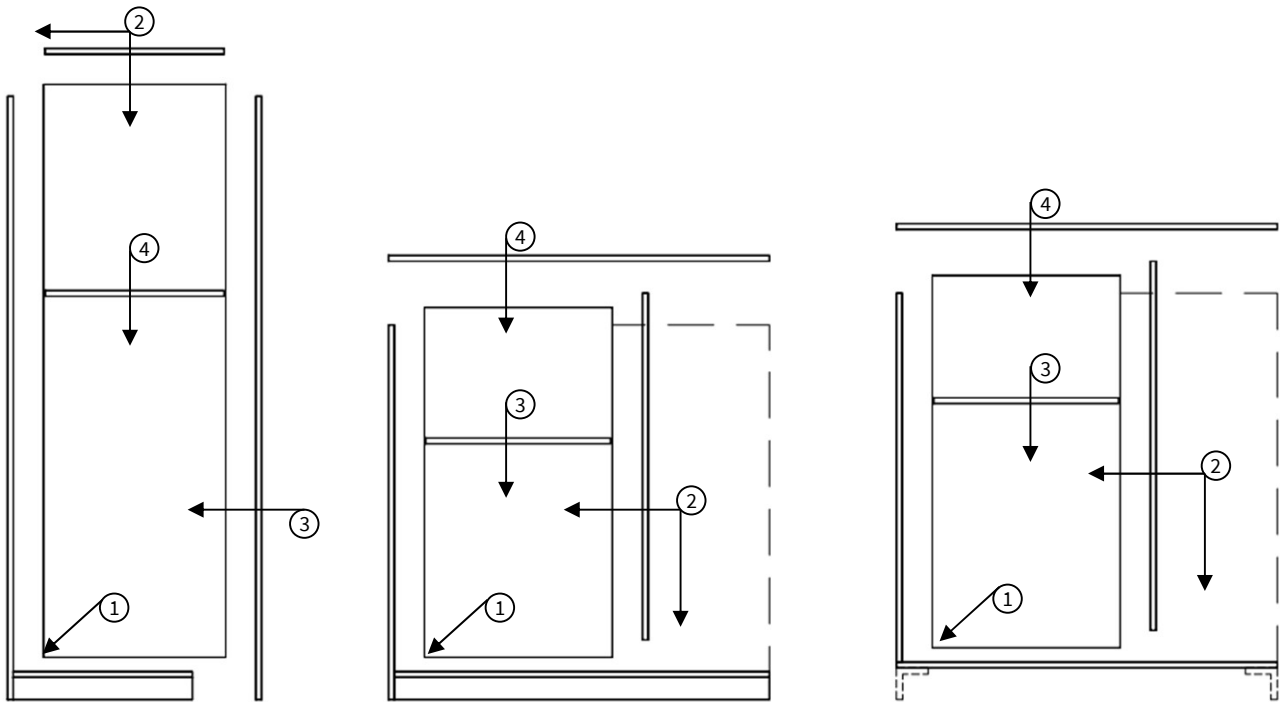


For easy assembly, **assemble** the furniture **from left to right**. Start with the left exterior and connect it to the base. Depending on the construction outline (please refer to your furniture configuration) continue with the assembly steps outlined below.

Preparing components for assembly - connecting the elements

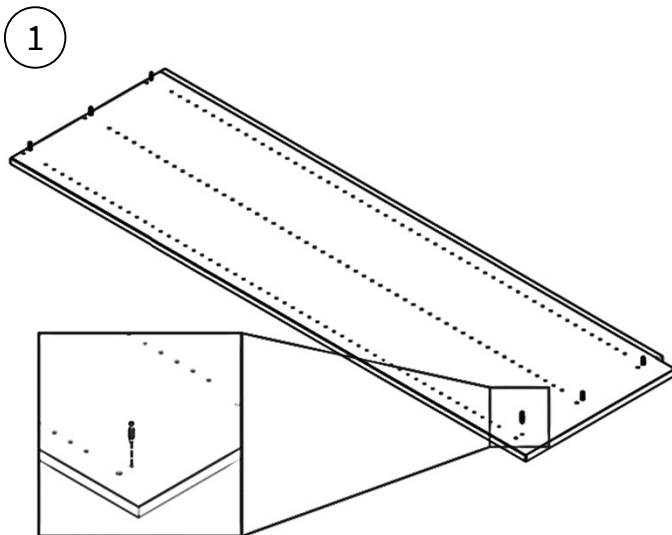

V01

Screw the structure connector dowels (V01) into the **sides**.

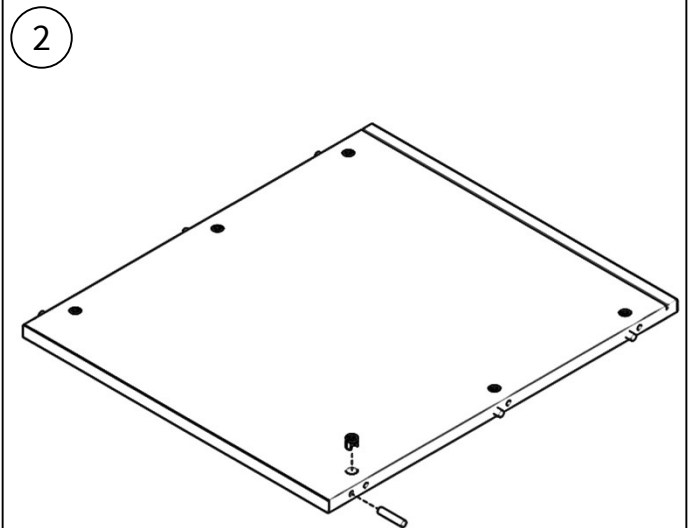


V02

V05

Press the structure connector housings (V02) and the wooden dowels (V05) into the **upper** and **lower shelves**.


3

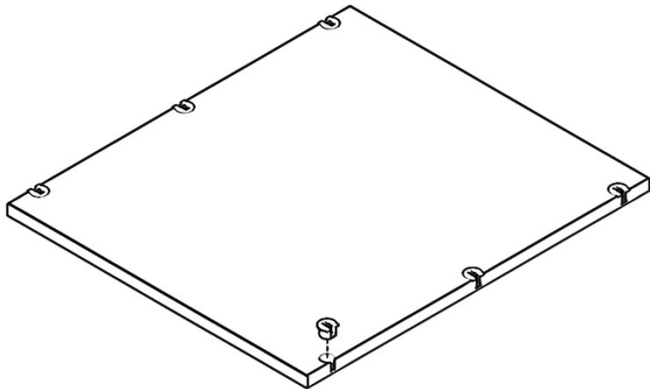

V03

Press the shelf connector housings (V03) into the **shelves**. We recommend using a hammer with a rubber head for this purpose.


4

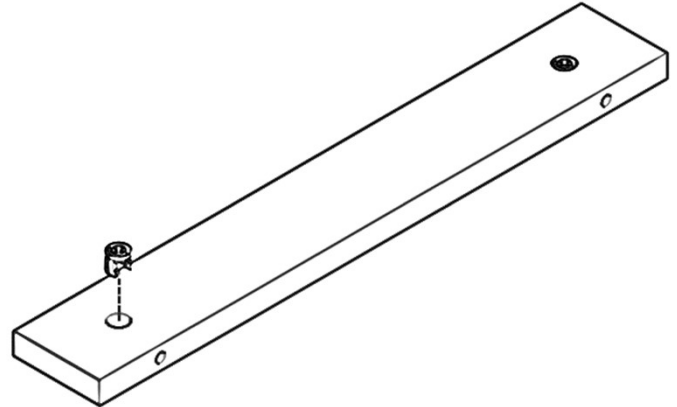

V02

Press the housings of the structure connector (V02) into the **base panels**.

5

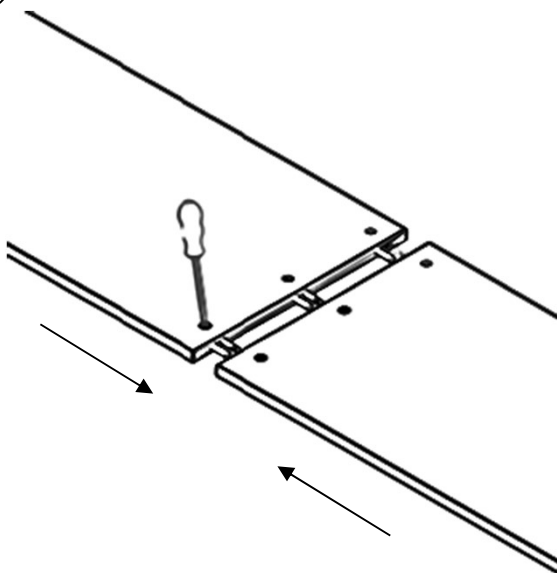


V02

V06

Long components are divided into two parts and are connected with surface connectors (V06). **Important Note:** Tighten the connector housings (V02) gradually and alternately, otherwise they may not grip properly.

6

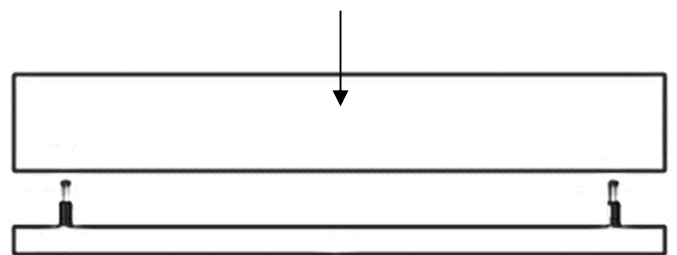


V01

V02


Plug the **base panels** onto the inverted **bottom panel**. Carefully tighten the structure connectors (V02) firmly.

1

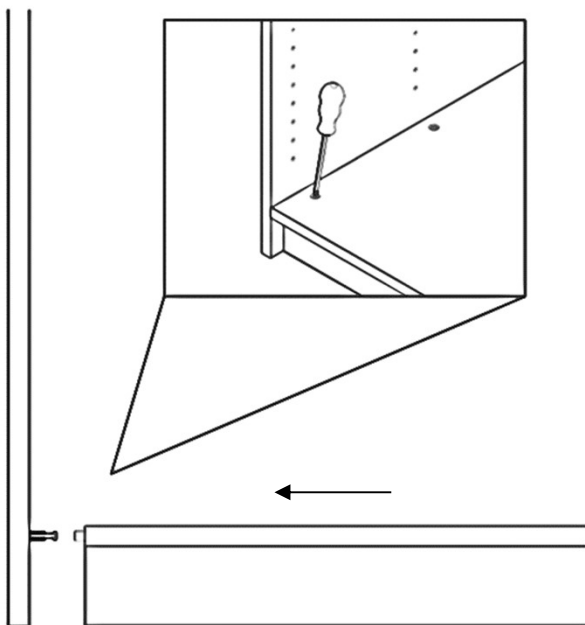

V01 V02 V05


Slide the **base panel** to the left cheek and fix the components by tightening the structure connector housing (V02).

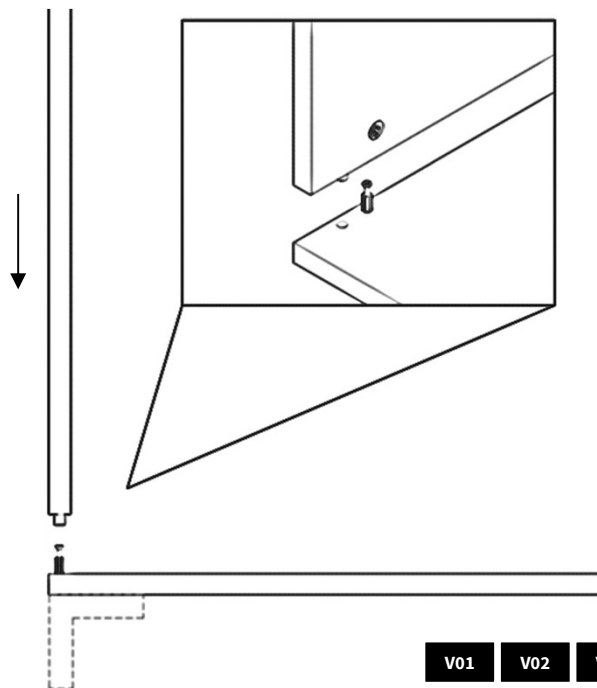

V01 V02 V05


If your furniture does **not have a base**, plug the stringers directly onto the bottom panel and fix the structure connector housing (V02) with a screwdriver.

2

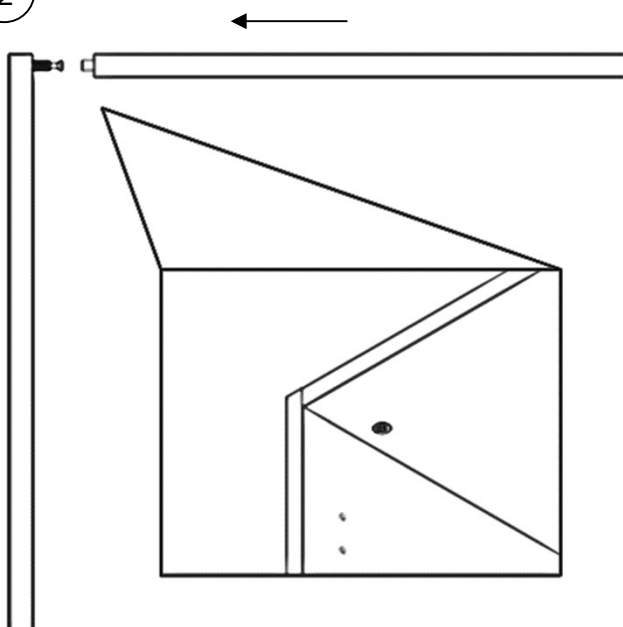


V01 V02 V05

Then slide on the **top shelf** and fix the structure connector housing (V02).

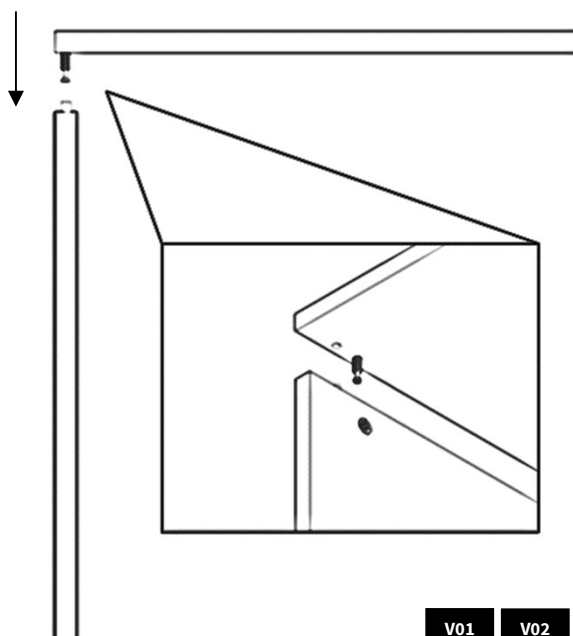

V01 V02 V05


If you have a **continuous top shelf**, insert it from above and fix the structure connector housing (V02). **Important Note:** the top shelf should be left until the end of the assembly.

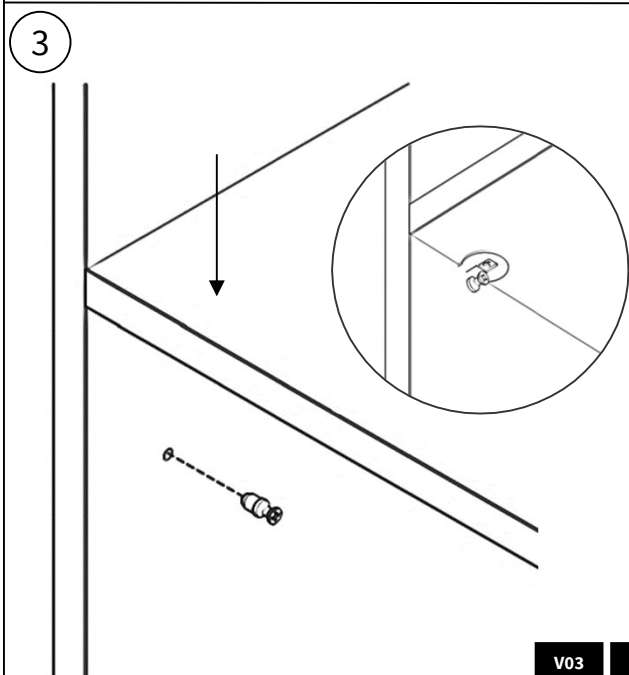

V03


V04

To insert the **shelves**, screw the shelf connector dowels (V04) into the stringers and slide the shelf onto them from above. Then fix the shelf connector housings (V03).

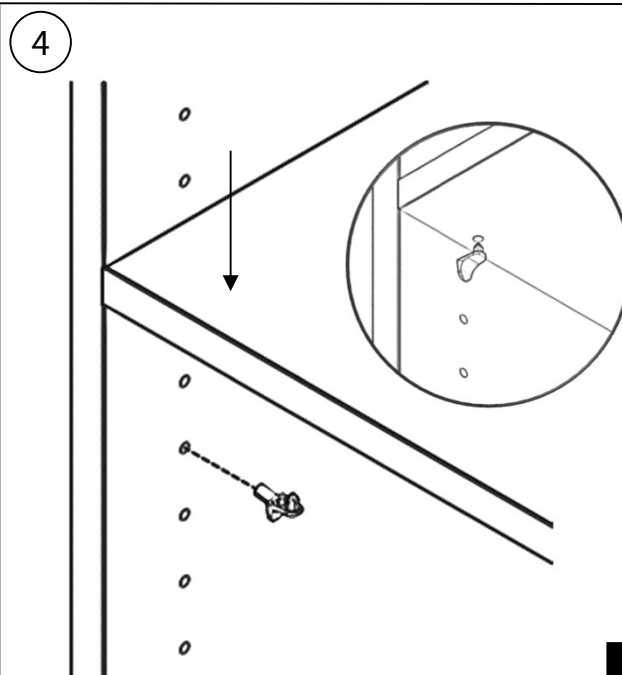


V07

To insert **shelves** into a strip with mounting holes, insert the shelf support (V07) into the stringers and slide the shelf on top. **Important Note:** One shelf per column must be fixed according to Step 3 to ensure your shelving has sufficient stability.

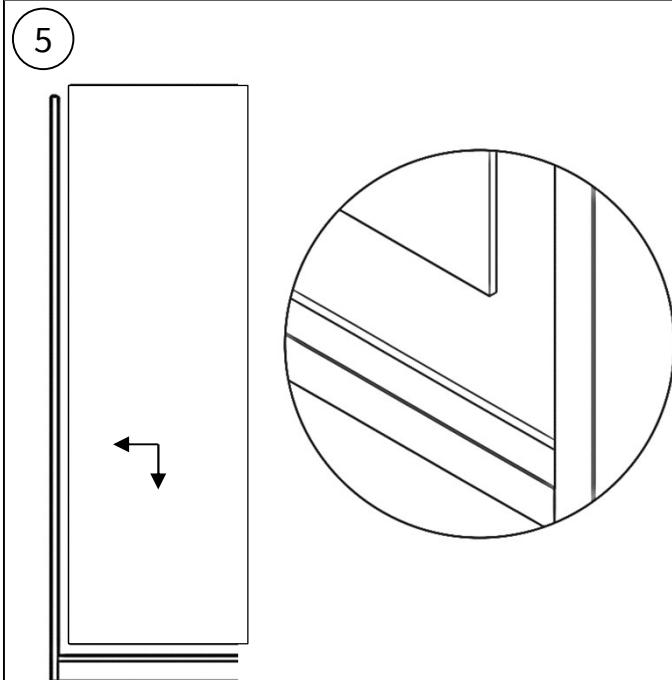


Slide the **back panels** into the grooves. Pay attention to the correct order of assembly. First place the bottom shelf, then the back panel and finally the top shelf against the stringer.

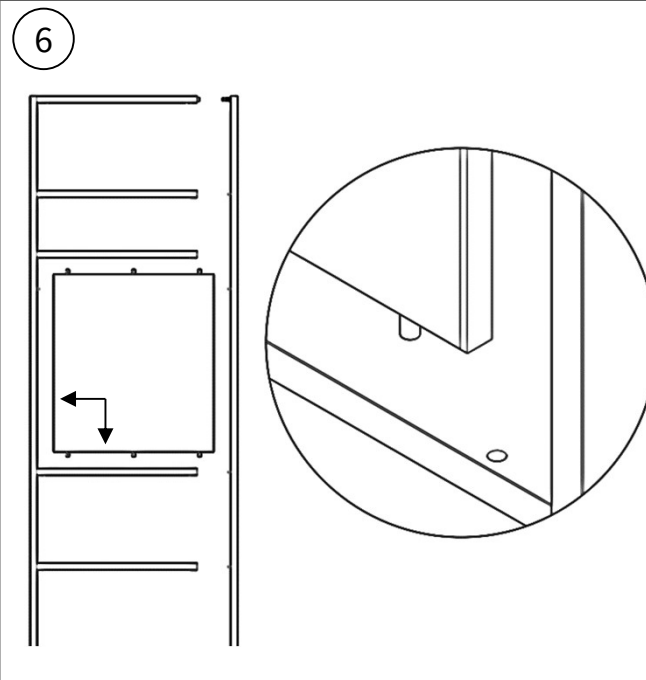


V05

Solid back panels are fixed by inserting them into the dowel holes (V05).


I.
*Non-continuous top
& bottom panels*

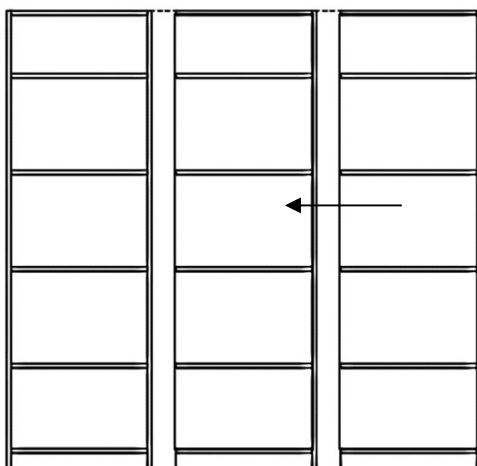

II.
*Continuous top &
bottom panels with
base*

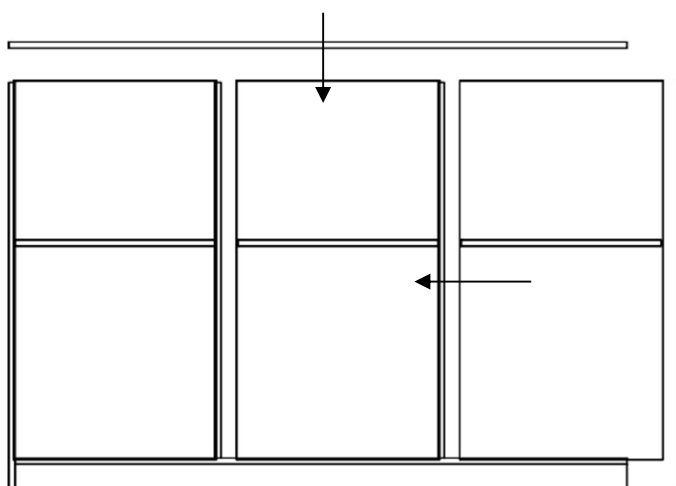


III.
*Continuous top &
bottom panels
without base.*

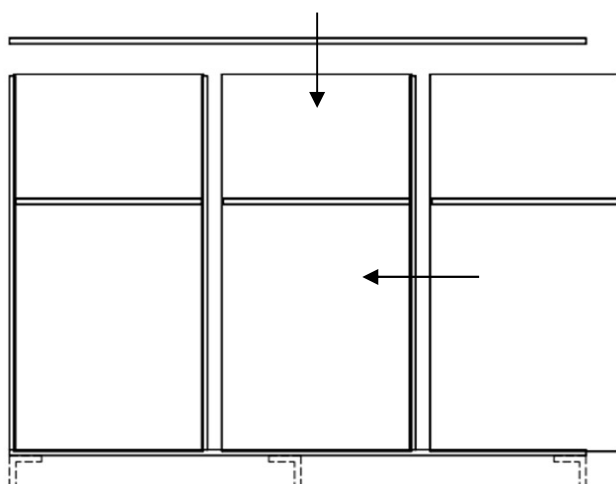

Repeat **steps 1-6** consecutively for each column. Observe the outlined procedure for split or continuous panels.


1

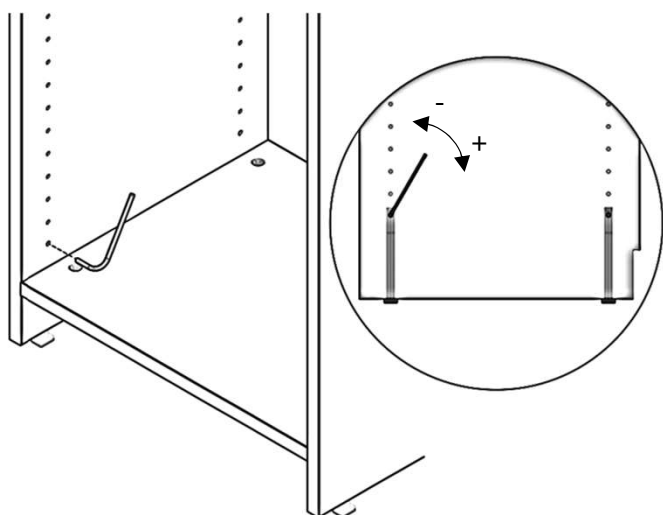

V09

Optional **height adjuster** (V09): Adjust the furniture with an Allen key and with the help of a spirit level.


2

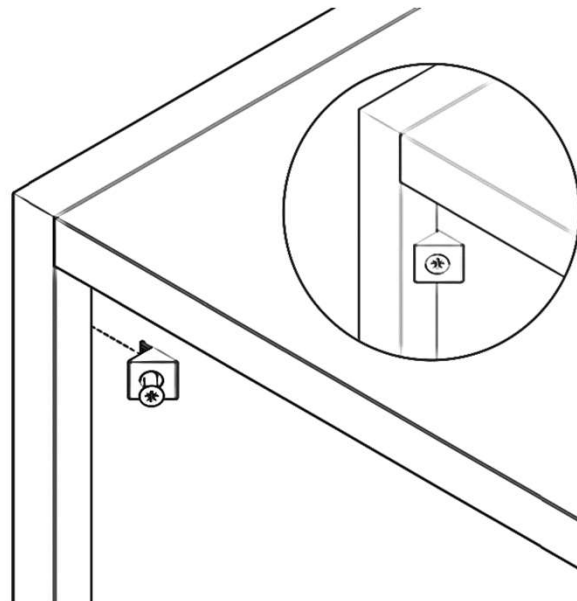

V10

To stabilise a back panel, insert the **back panel brackets** (V10) into the groove from behind. Then tighten the screws. It is recommended to fix a corner bracket every 30cm.


3

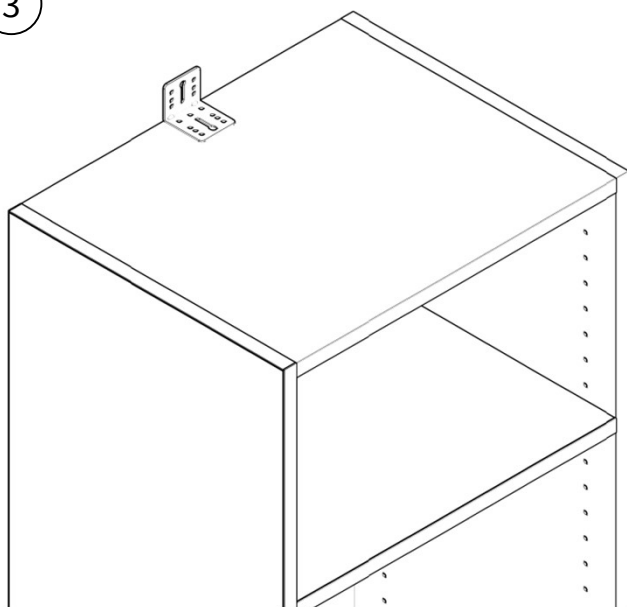

V11 V12 V15

Once you have stabilised and leveled the furniture, attach it to the wall using the **anti-tip brackets** (V11). Use the screws for the furniture (V15) and the wall (V12) for this purpose.


4

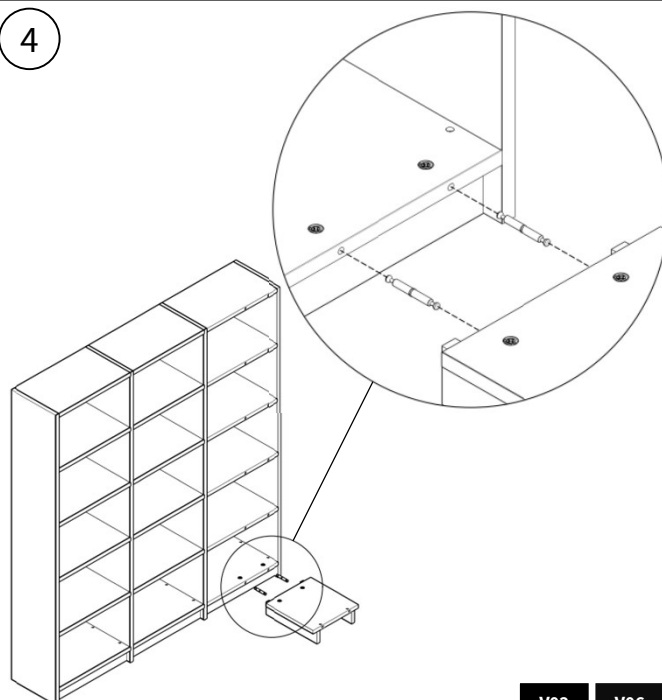

V02 V06

For **corner constructions**, connect the individual elements (e.g. the bottom panels) with the surface connectors (V02 - V06) during assembly. For this process, also refer to **Step 5** on page 8.

1

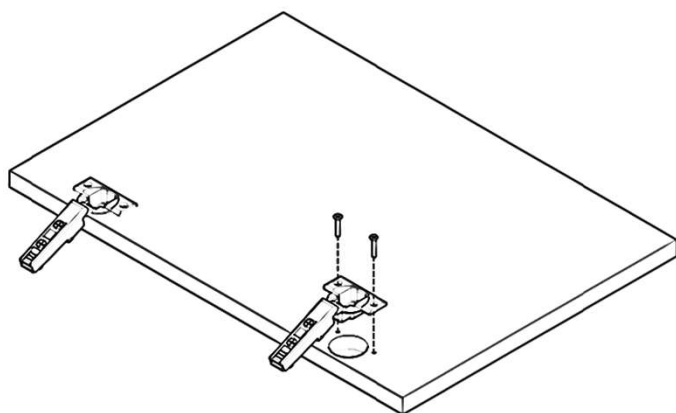


V13


V15

For **doors and flaps**, insert the hinges (V13) and screw (V15) them in place.


Corner hinge

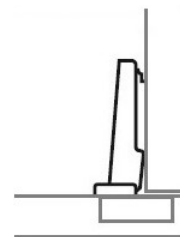

Central panel hinge

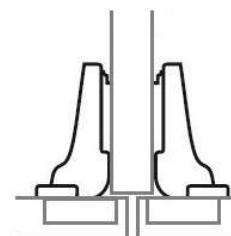


Inside hinge

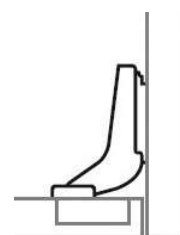

When actioning this, make sure to choose the right **hinges**. Match the mounting positions of the fronts.


2

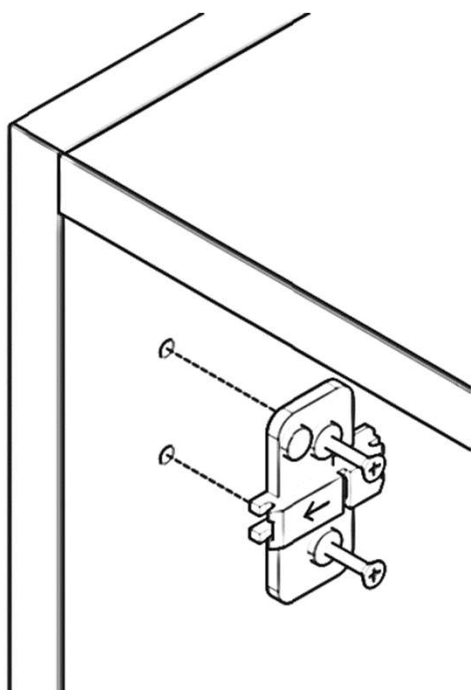

V14

Insert the **mounting plates** (V14) with the arrow pointing forwards and fasten them by fixing the screws.


3

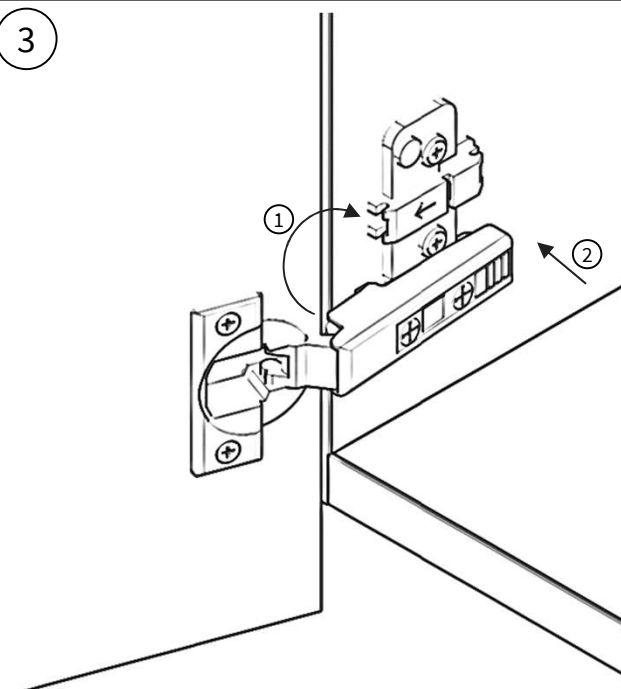

V13


V14

First place the hinges (V13) on the front edge of the mounting plate (V14). Then press the hinges firmly at the rear until the hinge engages.

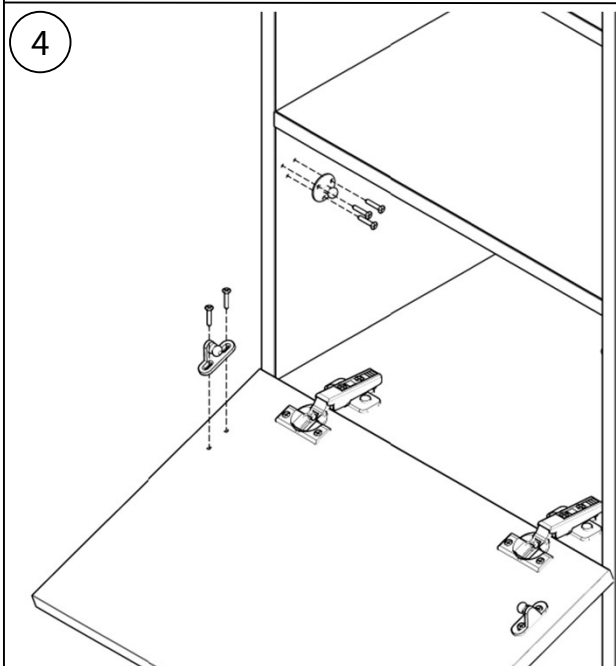


V15 V17

To properly mount a **flap**, first screw (V15) the mounting plates (V17) to the stringers and front.

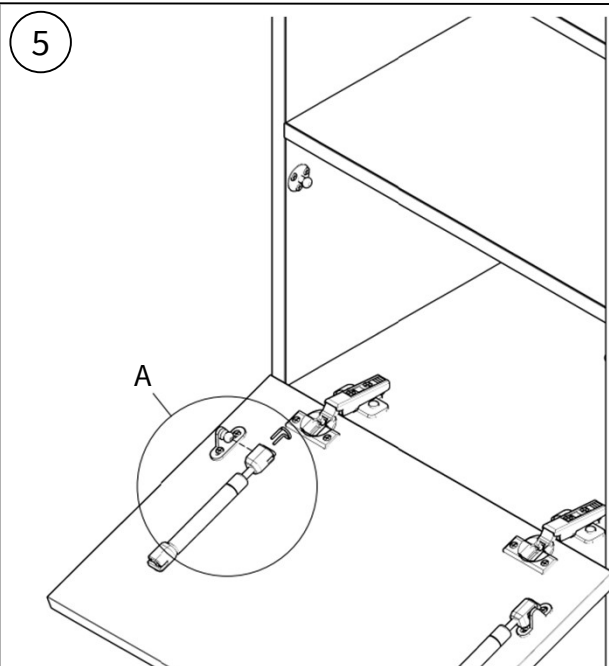


V17

When the mounting plates are fixed, first attach the **flap fitting** (V17) to the front. See Detail A for reference.

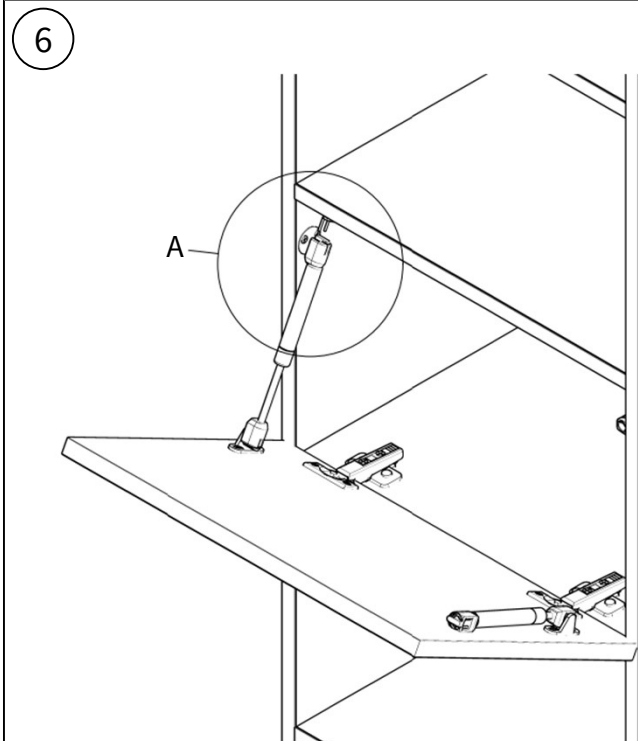


V17

Repeat this process (5) on the furniture cheek.
See Detail A for reference.

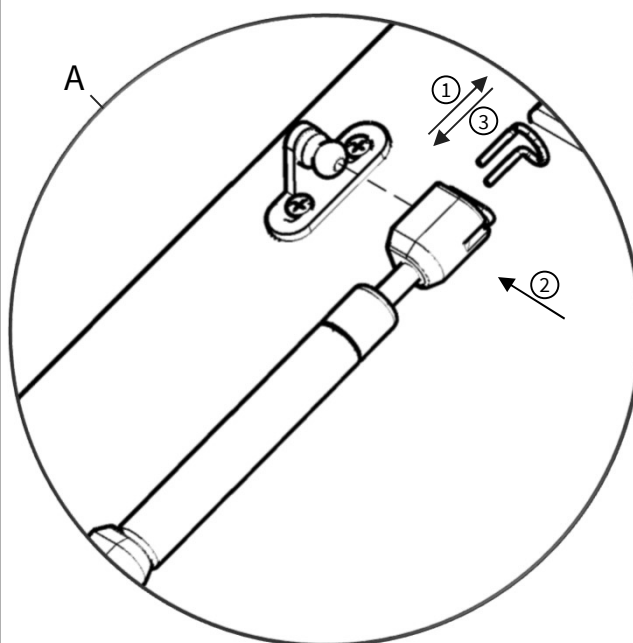

Fix the fitting:
1. Loosen the metal clamp
2. Place the fitting on the holder
3. Fix the fitting with the clamp
Upward opening hinged doors are also fixed in this way.


7

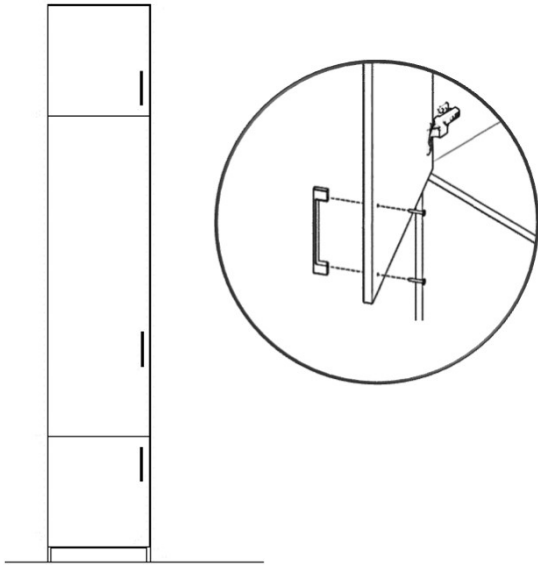

V18


Fasten the **handles** to the doors through the pre-drilled holes using the enclosed M4 screws (V18). **Important Note:** Use the shorter version of the screws (V18) for glass doors.

8

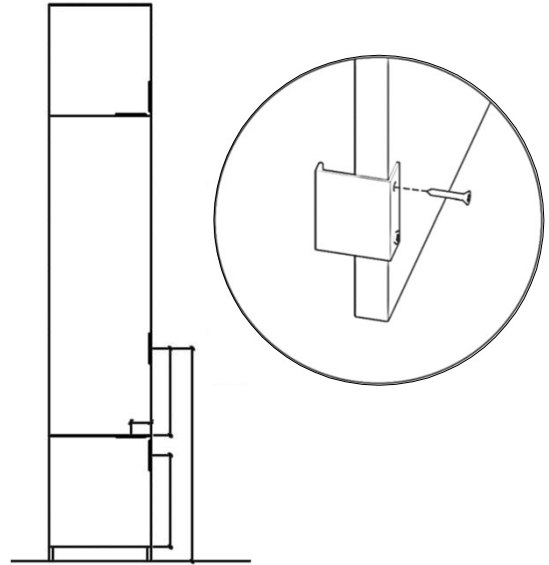

For **handle 2 or 3**, you can determine the position for yourself. Screw them in place at the back using the screws provided. The handles can also be mounted horizontally.

9

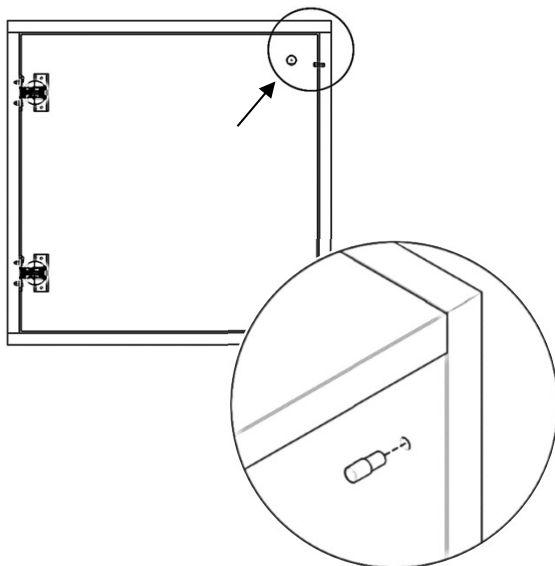


V08

For **interior doors** with a handle, stop buffers (V08) are enclosed. Press them into the pilot holes.

Note: In the case of hinged doors, the stop buffers are fitted at the bottom edge of the door.


10

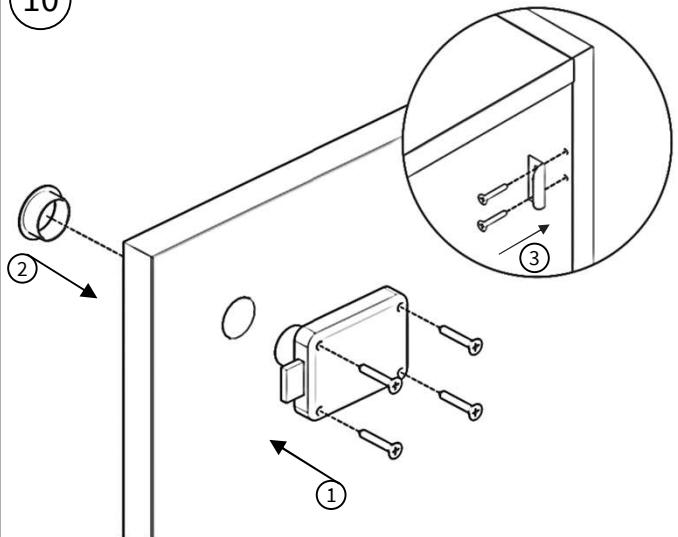


V19

Furniture locks (V19) are pressed into the hole from behind and screwed into place. Press the key rosette from the front and then screw the locking bracket to the stringers or the shelf.


Note: For hinged doors, screw the striker bar to the opposite door.

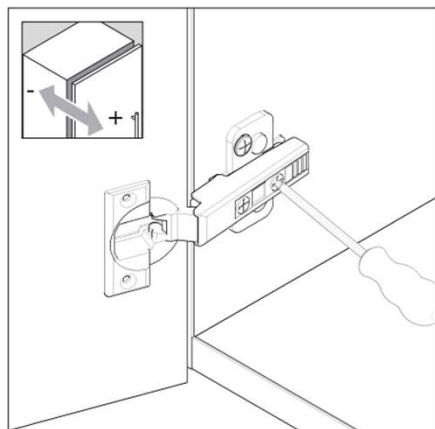

+3 / -2 mm

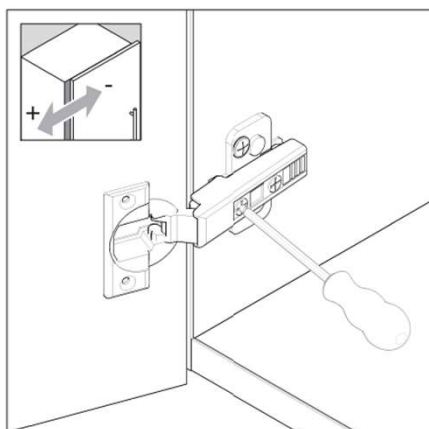

+/- 2 mm

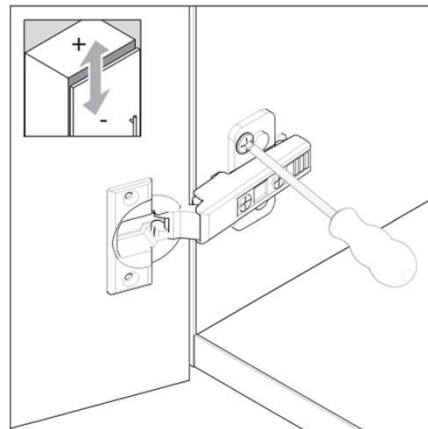




max. +/- 3mm

V13

V14

To **adjust the joint pattern**, you can use the adjustment options on the cup bands (V13) and the mounting plates (V14).

Note: Start with one front and align to a stinger. Then adjust and attach the other fronts to it.

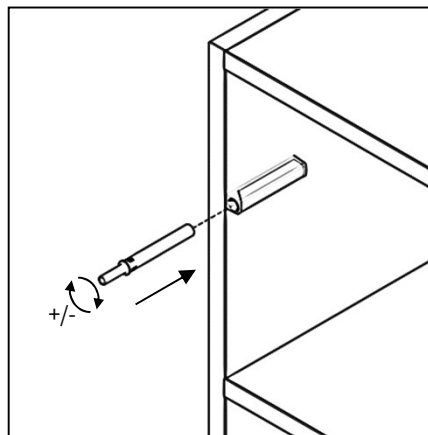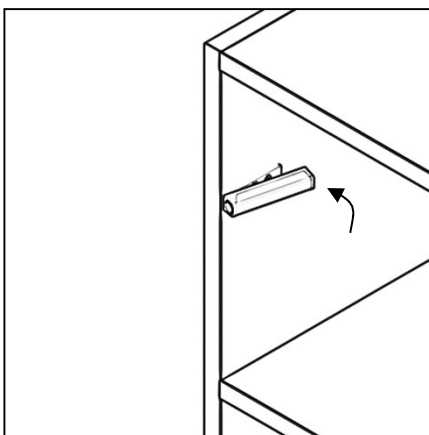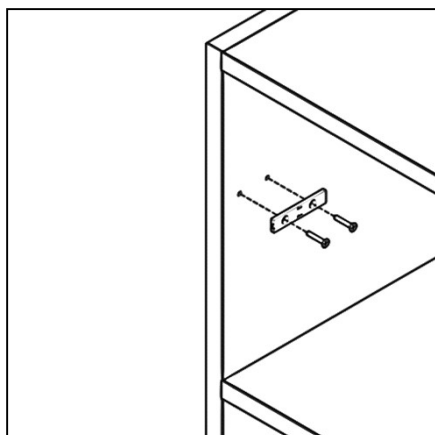


V15

V23


Mounting **Push-To-Open** (V23) for doors and flaps: First screw on the adapter plate with the wood screws (V15), making sure that the arrows point to the front edge. Then clip on the spring housing and push in the spring from the front.

Note: If you turn the front cylinder of the spring, you can adjust the depth.

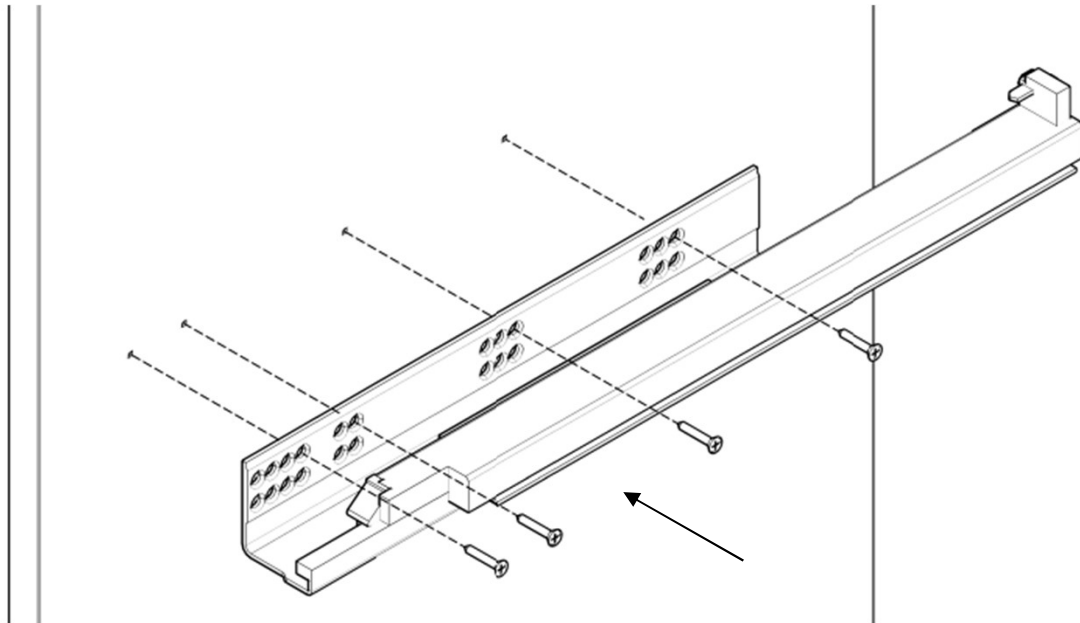

V15 V21

Use the wood screws (V15) to screw the **drawer rails** (V21) to the stringers of the furniture.
Use the fourth upper hole of the rails for the first hole in the stringboard. The other fastening points can be found in the predrilled holes in the stringers.

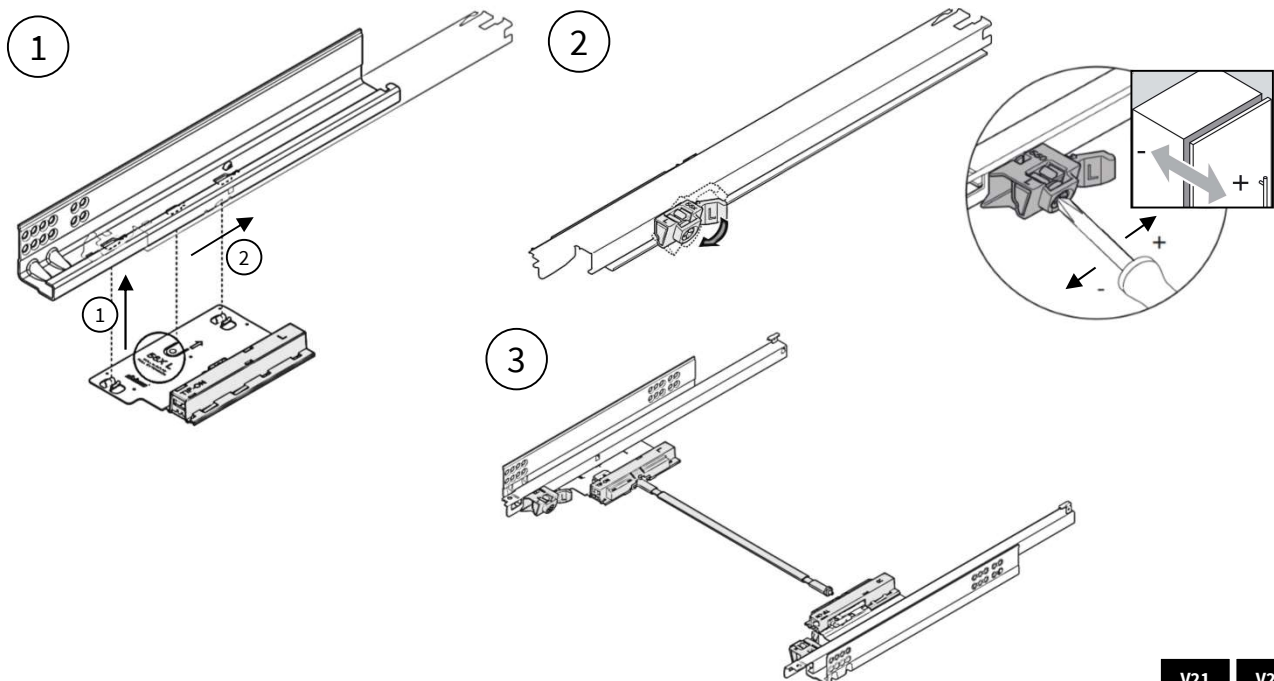


V21 V24

For **drawers with Push-To-Open** functionality, install the supplied elements (V24) on the rails (V21) and adjust the position if necessary.

Note: The synchronizing rod shown in step 3 is only necessary for drawers wider than 60 cm.


1

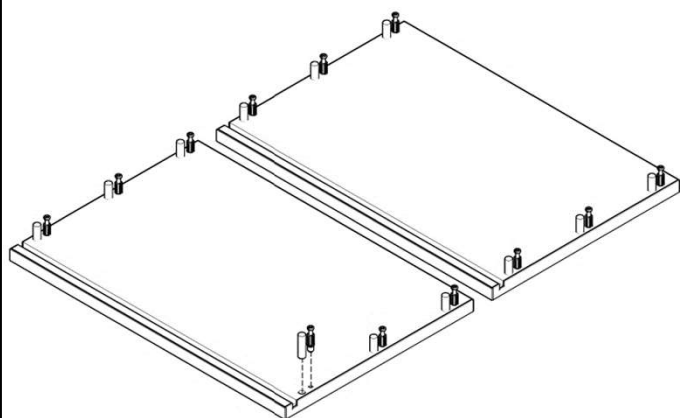

V01 V05

Place the drawer sides in front of you and screw in the eccentric screws (V01) and press in the dowels (V05).


2

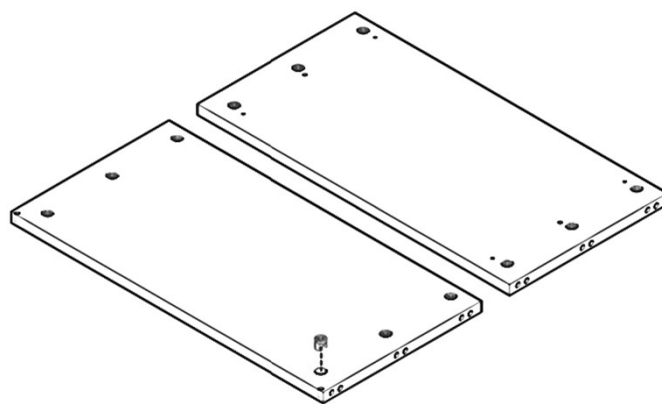

V02

Press the eccentric housings (V02) into the front and rear pieces. Make sure that the open side and the arrow point outward.


3

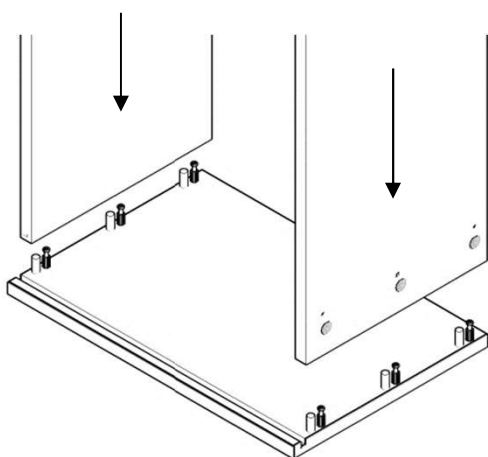

V01 V02

Attach the front and rear panels to the side panels. Then fix the housings (V02) by rotating them 180° with a screwdriver.

4

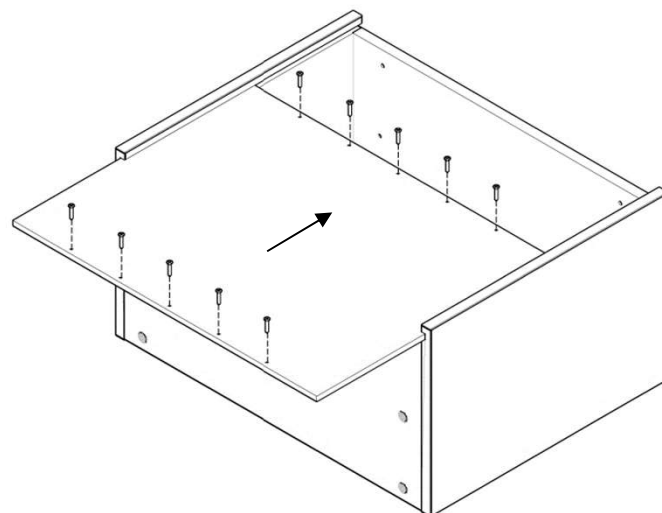


V16

Slide in the bottom. Align the bottom flush with the front edge of the drawer and fix it with the screws (V16).




5

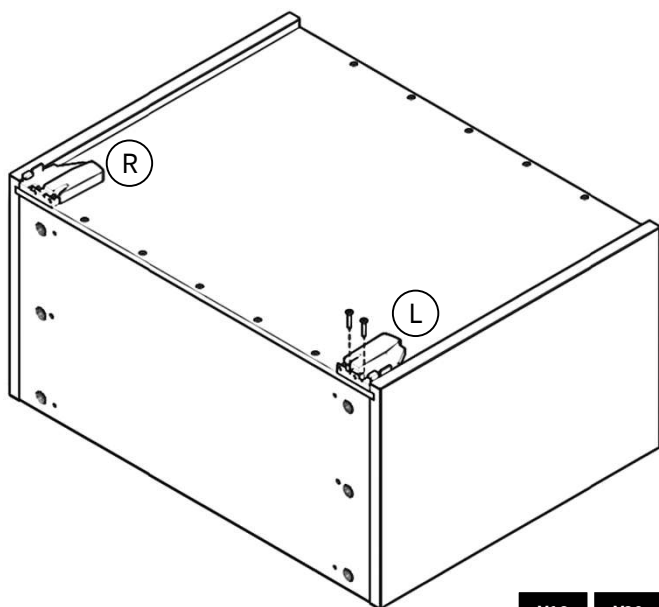

V16 V20

The couplings (V20) are labeled R and L. When screwing on the couplings, make sure that they are flush with the front edge. You can recognise the front edge by the additional holes.


6

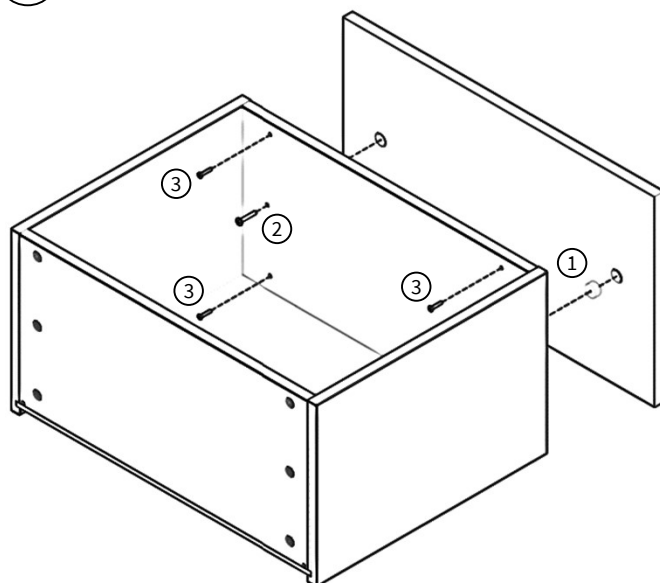

V22 V18 V16

1. Press the adjustment fittings (V22) into the cover.
2. Tighten the threaded screws (V18).

7

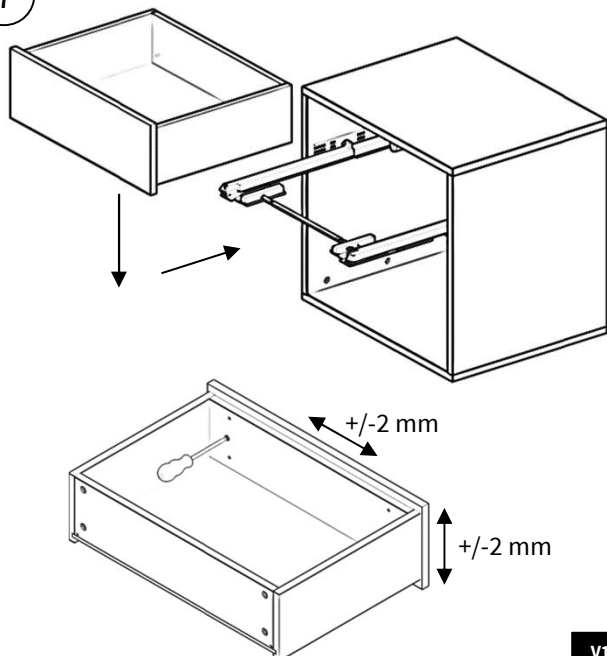


V18

Fit the drawer together with the front into the structure. Now you can loosen the threaded screws (V18) a little to adjust the front.


3. Screw the wood screws (V16) tightly.

8

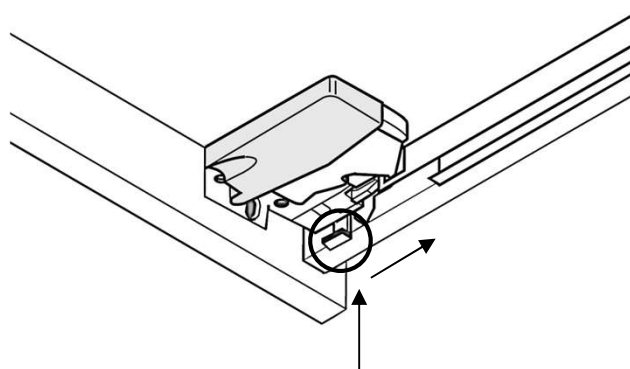

V20


To subsequently adjust the height of the drawer, move the control on the drawer coupling (V20) forwards or backwards.

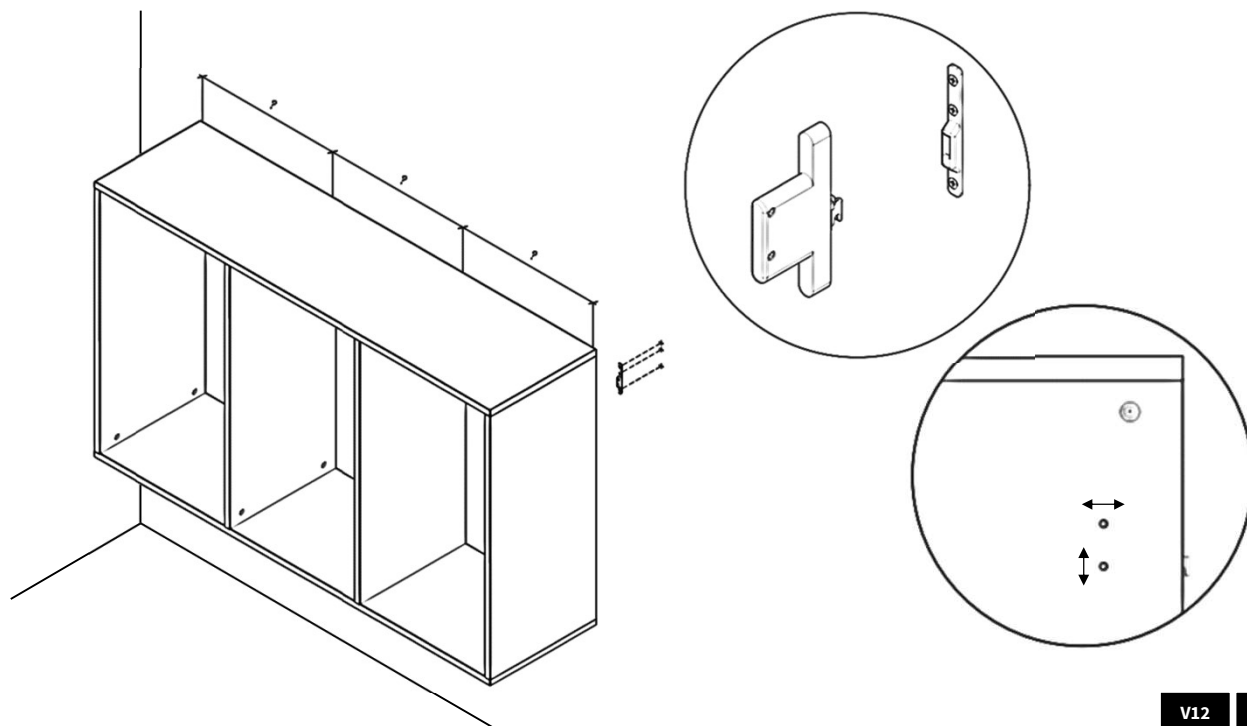

V12 V25


First measure the distances between the brackets (V25) in the stringers. Mark these distances on the wall using a spirit level. Now drill and screw (V12) the counter plates here. You can then hang the shelf.

Important Note: Use the adjustment screws to pull the furniture to the wall and adjust its height. For this you need an Allen key.

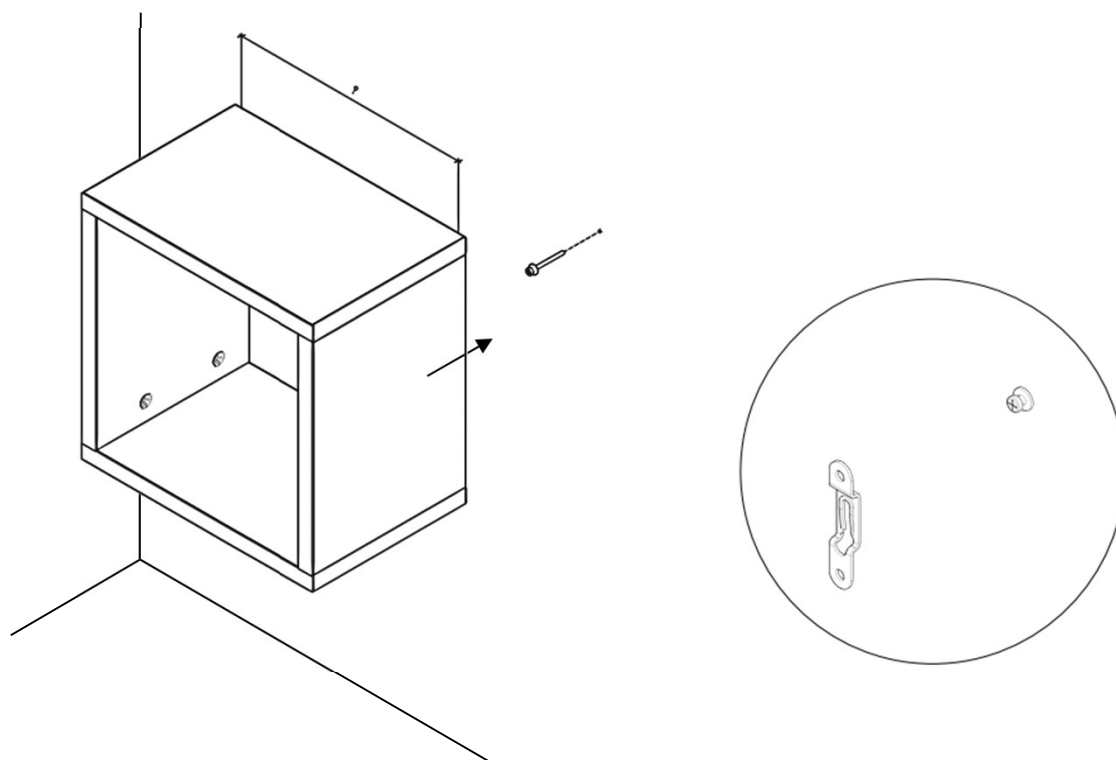

V26



Wall cubes are mounted by first measuring the distances between the brackets in the stringers. Mark these distances on the wall using a spirit level. Drill the holes for the screws (V26) and attach them to the wall. You can then hang up the wall cube.

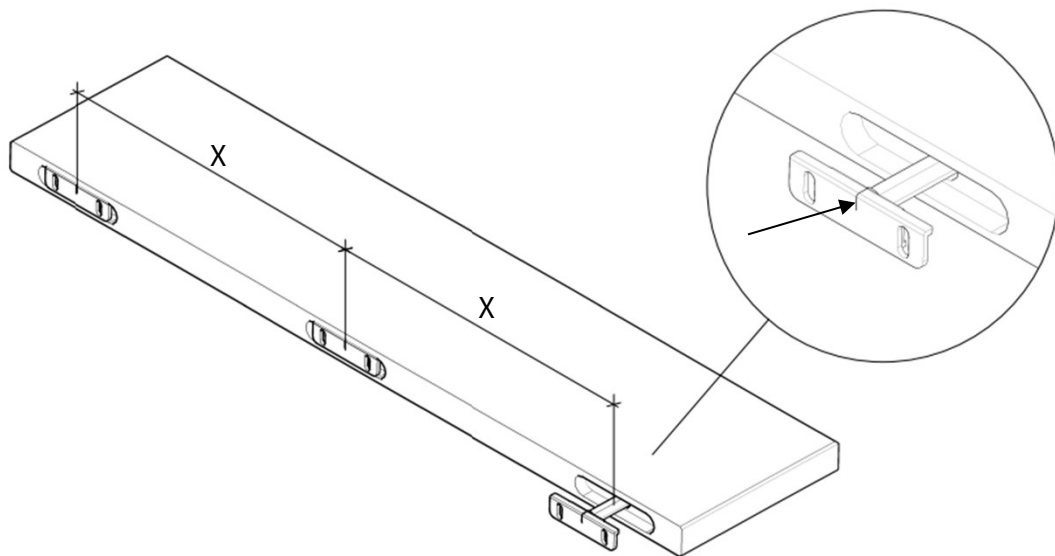

V27

Insert the supplied brackets (V27) into the holes of the wall shelving board. Make sure that the notches point upwards (see sketch). Then measure the distances (X) between the holders.

Important Note: Measure from notch to notch. Mark the measured distances on the wall using a spirit level. The markings sit approx. 5 mm below the wall shelving board surface.

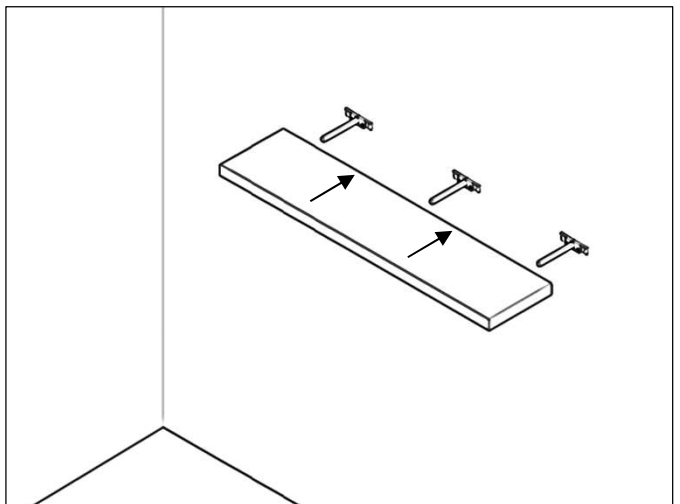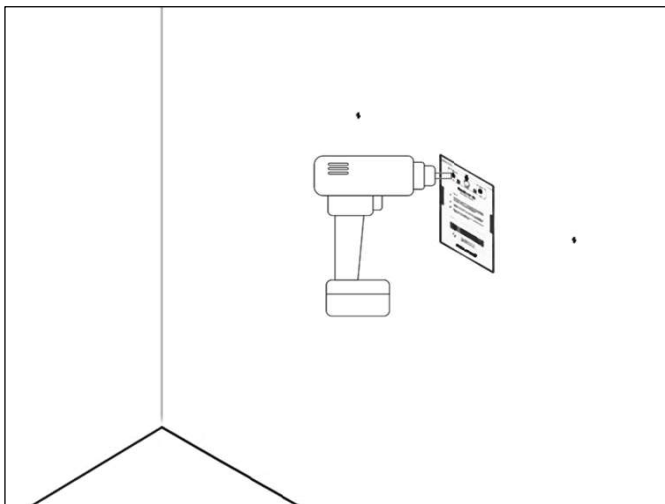

V12

Cut out the supplied **drilling template** and hold it against the markings as directed. Hold the template at each mark and drill all holes. Screw on the brackets (V12) and then slide on the wall shelving board. For high storage arrangements, the angle of inclination can be changed using the adjustment screws on the brackets.







Book assembly service
retrospectively:



www.pickawood.com/en/advice-service/montage

If you have any questions, you can reach us via
email or telephone. We will be happy to help you!



Mail: support@pickawood.com

Telephone: 0330 808 4870

Web: www.pickawood.com

Amsinckstraße 34, 20097 Hamburg, Germany